



































Datum: 10-05-2026

## Schroevendraaiers Torx



## Producten

| Naam  | Artikelnr.       | Vrpk.nhd |
|---|------------------|----------|
|  PB schroevendraaier 5400.10-70  | 06H-PB5400-10-00 | --       |
|  PB schroevendraaier 5400.15-80  | 06H-PB5400-15-00 | --       |
|  PB schroevendraaier 5400.20-100 | 06H-PB5400-20-00 | --       |
|  PB schroevendraaier 5400.25-125 | 06H-PB5400-25-00 | --       |
|  PB schroevendraaier 5400.30-130 | 06H-PB5400-30-00 | --       |
|  PB schroevendraaier 8400.10-70  | 06H-PB8400-10-00 | --       |
|  PB schroevendraaier 8400.15-80  | 06H-PB8400-15-00 | --       |
|  PB schroevendraaier 8400.20-100 | 06H-PB8400-20-00 | --       |
|  PB schroevendraaier 8400.25-120 | 06H-PB8400-25-00 | --       |

| Naam   | Artikelnr.       | Vrpk.nhd |
|--|------------------|----------|
|  PB schroevendraaier 8400.27-125    | 06H-PB8400-27-00 | --       |
|  PB schroevendraaier 8400.3-40      | 06H-PB8400-3-000 | --       |
|  PB schroevendraaier 8400.30-130    | 06H-PB8400-30-00 | --       |
|  PB schroevendraaier 8400.4-40      | 06H-PB8400-4-000 | --       |
|  PB schroevendraaier 8400.40-140    | 06H-PB8400-40-00 | --       |
|  PB schroevendraaier 8400.5-50      | 06H-PB8400-5-000 | --       |
|  PB schroevendraaier 8400.6-50      | 06H-PB8400-6-000 | --       |
|  PB schroevendraaier 8400.7-50      | 06H-PB8400-7-000 | --       |
|  PB schroevendraaier 8400.8-60      | 06H-PB8400-8-000 | --       |
|  PB schroevendraaier 8400.9-60      | 06H-PB8400-9-000 | --       |
|  PB schroevendraaier 8400.B10-200   | 06H-PB8400B10200 | --       |
|  PB schroevendraaier 8400.B10-70    | 06H-PB8400B-10-0 | --       |
|  PB schroevendraaier 8400.B15-80   | 06H-PB8400B-15-0 | --       |
|  PB schroevendraaier 8400.B20-100 | 06H-PB8400B-20-0 | --       |
|  PB schroevendraaier 8400.B20-250 | 06H-PB8400B20250 | --       |
|  PB schroevendraaier 8400.B25-120 | 06H-PB8400B-25-0 | --       |
|  PB schroevendraaier 8400.B27-125 | 06H-PB8400B-27-0 | --       |
|  PB schroevendraaier 8400.B30-130 | 06H-PB8400B-30-0 | --       |
|  PB schroevendraaier 8400.B40-140 | 06H-PB8400B-40-0 | --       |
|  PB schroevendraaier 8400.B6-50   | 06H-PB8400B-6-00 | --       |
|  PB schroevendraaier 8400.B7-50   | 06H-PB8400B-7-00 | --       |
|  PB schroevendraaier 8400.B8-60   | 06H-PB8400B-8-00 | --       |
|  PB schroevendraaier 8400.B9-60   | 06H-PB8400B-9-00 | --       |